

No.8 Haitai Huake Rd2(Huayuan), Binhai Hi-Tech Zone, Tianjin 300384, China Tel: +86-22-58596037 Fax: +86-22-58596177 en.tiandy.com

How to set multi-screens preview at Easy7 Softeware

Description: Easy7 Software supports multi-screen video preview , this document will show you how to set it.

Note: For now our software support 4 screens at most.

Prerequisites:

1、Customers are advised to download the latest software version from our

official website

2、There are multi video out ports at your computer

Section 1: how to do operation at Easy7 software

1. Open the first Live view window

Double click the Live View icon to open the first window





 Tiondy
 Ilandy
 Iechnologies
 Co.,
 Lta.

 No.8 Haitai Huake Rd2(Huayuan), Binhai HI-Tech Zone, Tianjin 300384, China Tel: +86-22-58596037
 Fax: +86-22-58596037
 Fax: +86-22-58596037
 en.tiandy.com

Tiandy Home page		Live View					8 🗄 🛈 🗖	- ⊡ × 17:18:51 ∩		
Device List	•								Real-Time	History
🗆 📄 Custom Device I	Q List									
 camere1 camere2 camere3 										
 camere4 camere5 										
 ■ camere6 ■ camere7 		< 101 22. 4a	6 ()					1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		
		Real-Ti	me	History						
Favorites View	•									
PTZ Control Advanced Function	•									
٥				©T	ïandy Co.,Ltd A	All Rights Re	eserved			

2. Open the second Live view window

2.1Back to Home page double click Live view to open second window

2.2Use the left mouse button to hold down, and then drag the mouse to drag, then you can drag it to second screen

						8 🗐 🛈 🖻 🖯 🖯 🗆 🛪
Tiandy	Home	page Live	e View	Live View		
Device List	•					
	٩				Hold and dra	g
🗆 📄 💼 Custom Device						
🗉 📄 💼 camere1						
🗉 📄 💼 camere2						
🗉 📄 💼 camere3						
🗈 📄 💼 camere4						
🗈 📄 💼 camere5						
🗈 📄 💼 camere6		<				
Favorites						
View						
PTZ Control						
Advanced Function		ici 👪 🔩 🥥 🤁				- 55,000 - 5
Ċ.			CT	iandy Co.,Ltd All Rights Reserve	d	



 Tiandy
 Itanuy
 Itanuy<

Tiandy	Home page	Live Vie	w			ම 🗐 🛈 🖬 👌 🖒 — 🗇 : 17:33:29
Device List	-					Real-Time History
🗆 🗆 Custom Device	Q. List		Tiandy	Live View		
mean and a compared mean and a compa	< Real-Tr		Device List	This is ² Uist	second windo t to second sci	ow , you can reen
Favorites View	•		🗈 📄 💼 camere7	<		
PTZ Control Advanced Function	▲ ▲					



Note: There are two kind of mode of decoding, software decode & hardware decode, the difference of them is that ,software decode consumes CPU performance hardware consumes GPU performance

Set Decoding mode

Open Home page>System configuration>Video Setting, choose Decoding mode setting

Tiandy		Line Menne	15-2	P			ි 🛈 — 🗇 🗙 17:57:27				
н	ome page	Live View	Live	view	System configuration		[
Common Settings	Aut	omatically restore the state last	time you exit from the syste	n							
Video Settings											
Alarm grade	Swi	Switch between Main and Su 💿 Automatic 💦 Manual									
🖹 Storage management											
😭 Intelligent application	Auto	omatic Switching Screen Numb	er 4 🔻								
Record plan	Mar	nual Default Connection		•							
P2P setting											
	Play	/ property setting	Good fluency	 Take effect 							
	Dec	oding mode setting	Software decode	 *Take effect a 							
	Vide	eo download format	Software decode Hardware decoding								
Need to rebo	oot _{Pre}	view frame rate	hide	 Take effect 							
it effect	nake	ant playback time	60s	 * Take effect 							
		Restore Default Save									
A		©Tiandy Co.,Ltd All Rights Reserved									