

how to use digital watermarking

Description: Digital watermarking is for video temper, so camera add this function.

1、 First we need camera support this function,then enable this function.input some strings.

The screenshot shows the Tiandy camera configuration interface. The 'Configuration' tab is selected, and the 'Stream' sub-tab is active. The 'Stream' settings are as follows:

- Stream: 1st Stream
- Stream Type: Audio Video
- Resolution: 5MP(2880x1620)
- Bit Rate: 4096
- Frame Rate: 25
- Priority: Frame Rate
- I-Frame Interval: 50
- Encoding Mode: CBR
- Video Encoding: H.265
- S+: Disabled
- SVC: Disabled
- Smooth Video Streaming: 50 [Clarity<->Smooth]
- Smooth Display Mode: Disabled
- Encrypt Type: Not Encrypted
- Encrypt Password: (empty)
- Password Confirm: (empty)
- Digital watermarking: digitalwatermark Enabled

Buttons for 'Save' and 'Cancel' are visible at the bottom of the configuration panel.

2、 Check then video whether be temper

①open the mini player click the File,click Frame Check(F)

③Click the add button choose file,then click Start will have result

The screenshot shows a window titled "Frame Check" with a close button (X) in the top right corner. The main area contains a table with the following data:

Seq	File	Progress	Result	Watermark
<input checked="" type="checkbox"/> 1	C:\Users\admin\Desktop\001-20230523134522240.mp4	100.00%	Not Distort	digitalwatermark

At the bottom of the window, there is a checkbox labeled "All/Cancel" which is checked. To the right of this checkbox are three buttons: "Add", "Del", and "Start". The "Start" button is highlighted with a blue border.