



How to set Auto Cruise




Description: This document will show you how to set **Auto Cruise**

Prerequisites: PTZ NVR

Section 1: How to set Auto Cruise on PTZ

- 1.1 Click configuration→Dome Set→Motion Set button.
- 1.2 Click Preset→Set the need location→Set button.
- 1.3 Multiple preset positions can be set, Max 500position.
- 1.4 Click Auto Cruise→Set the need cruise preset and residence time.
- 1.5 Multiple Cruise mode can be set, Max 16cruise.

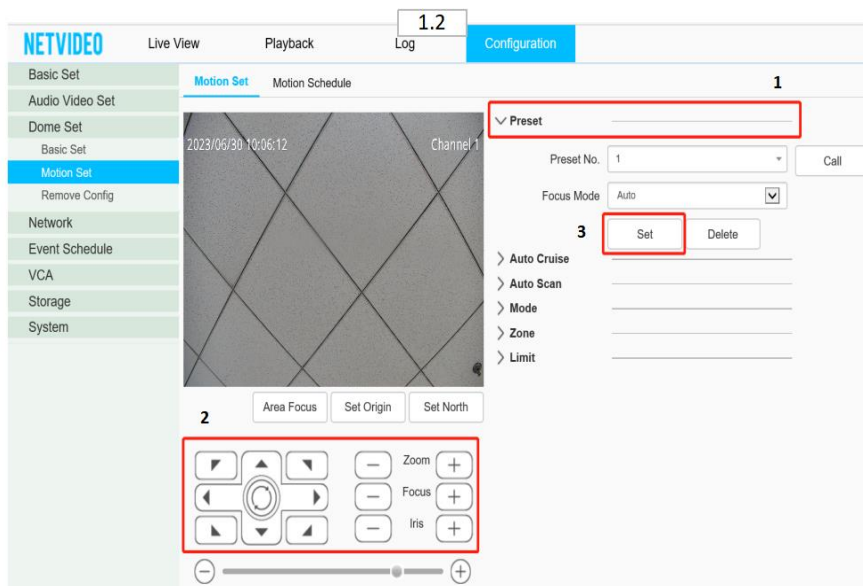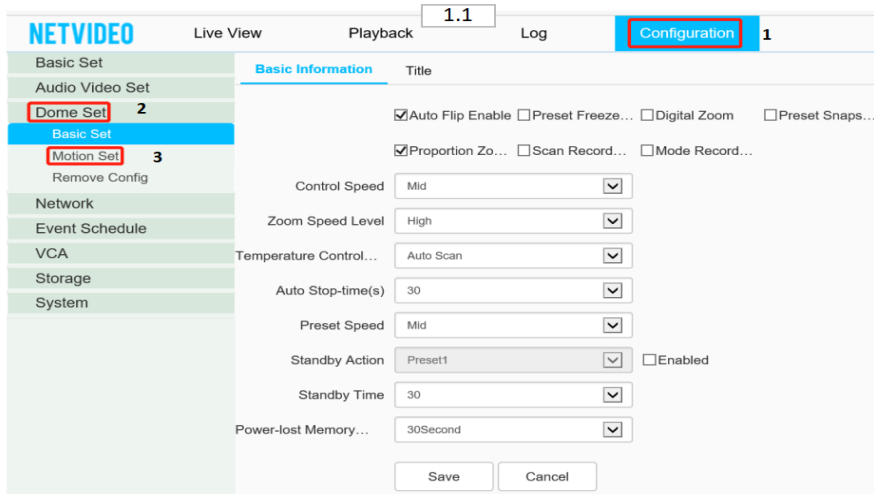

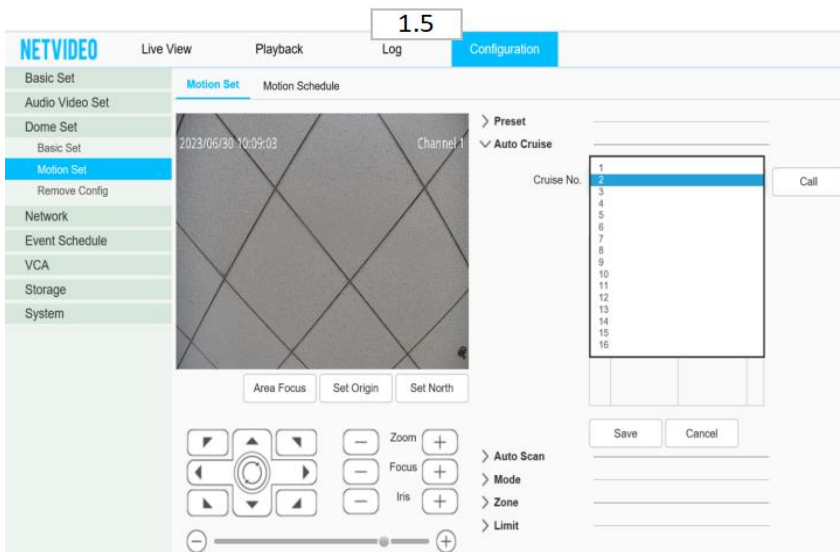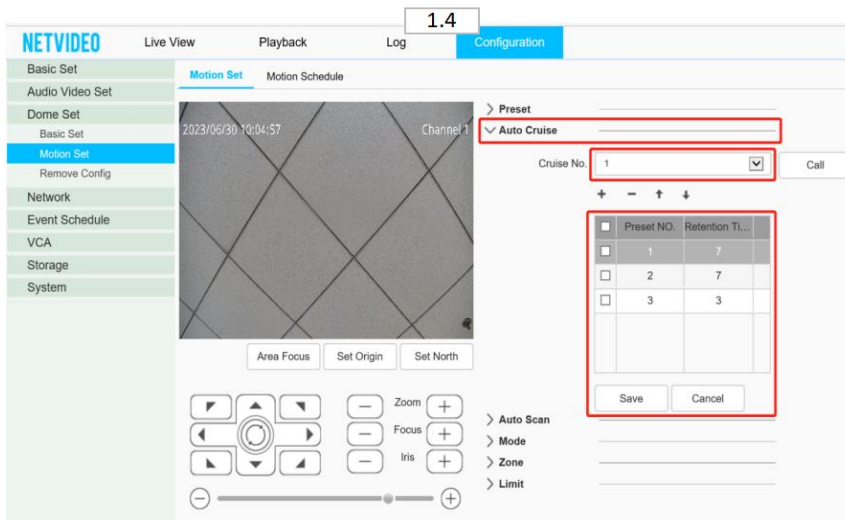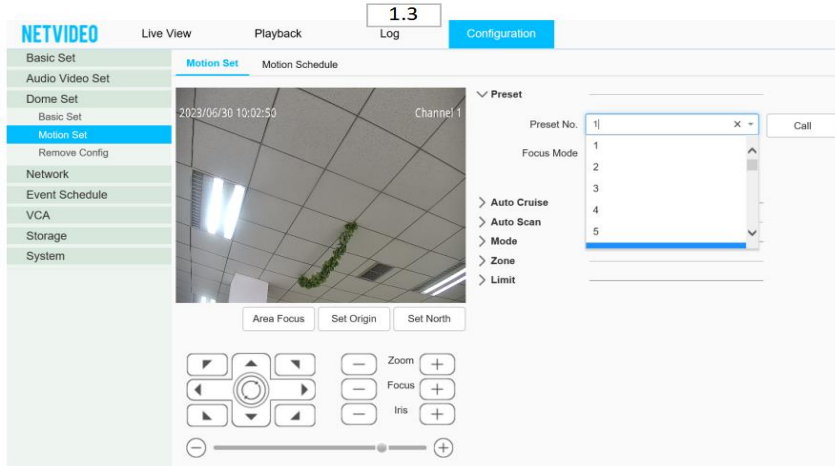

Section 2: How to set Auto Cruise on NVR

- 2.1 Click PTZ Control button.
- 2.2 Set the need location
- 2.3 Multiple preset positions can be set, Max 256 position.
- 2.4 Click Cruise button.
- 2.5 Set the need cruise preset and residence time
- 2.6 Multiple Cruise mode can be set, Max 8 cruise and apply can be set

